

Bär

SMART STAND MIXER

DDQ-B03V1

User Manual



Before use the product, please read the user manual carefully & keep it handy for future reference.

Product made for home use only, do not use for commercial purpose.

 
Warning : To prevent injuries, before use the product, please read the User Manual thoroughly, follow the instruction carefully.

PREFACE



Thank you for your purchase of BEAR product. This product fully developed by our Research and Development team. It is simple & easy to operate.

PARTS & ASSEMBLY

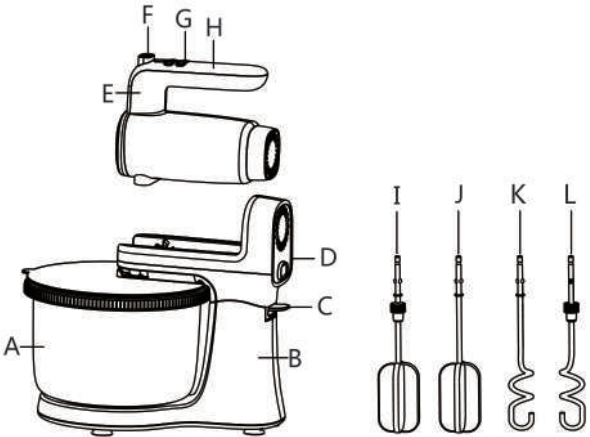

| No. | Part Name | No. | Part Name |
|-----|----------------------|-----|--------------|
| A | Stainless Steel Bowl | G | Control Knob |
| B | Bottom Base | H | Handle |
| C | Base Control Knob | I | Right Beater |
| D | Mixer Stand | J | Left Beater |
| E | Hand Mixer | K | Left Hook |
| F | Ejection Knob | L | Right Hook |

SPECIAL FEATURE

1. DC motor 9 speeds selection from low to high.
2. Come with stainless steel bowl, auto turning allow even mixing.
3. Come with stand to release your work load.

ACCESSORIES

| Model | Accessories | | | | | |
|-----------|-------------|-------------|------------|----------------------|--------|------|
| DDQ-B03V1 | Mixer | Bottom Base | Mixer Base | Stainless Steel Bowl | Beater | Hook |

HOW TO USE

 
1. Before use please clean all accessories.
2. Pour in ingredients into mixing bowl.




Caution :

1. Do not apply mixer stand for 100g flour mixed with <70g water.
2. Mix mixture <750g flour.

3. Place the mixing bowl into bottom base.

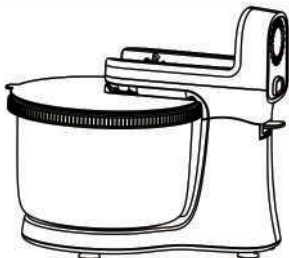

 
4. Inserts beater or hook into mixer body;

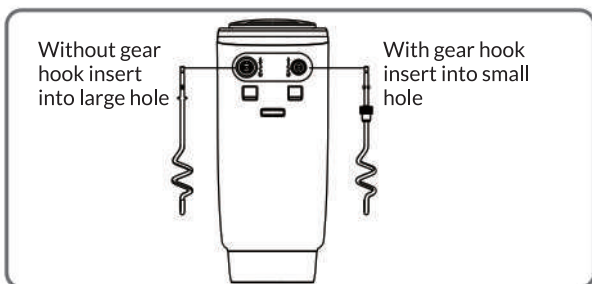


Notice :

Be sure do not wrongly inserted the left & right hook position.

 5. Place the mixer at mixer stand.

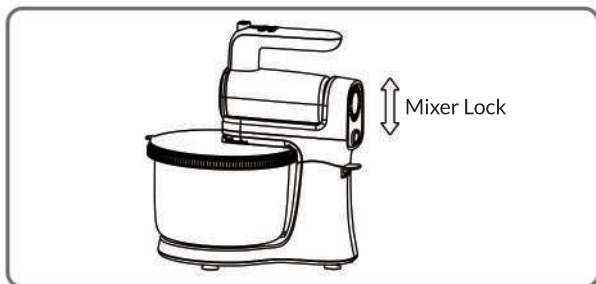

 6. Ensure speed control set at '0' position before connect to power.

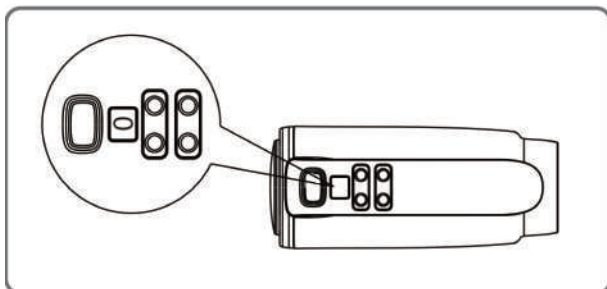


7. The product equipped with 9 speeds selection. You may select different speeds for different purpose i.e. for mixing flour :

- a) Speed 1 operate for 30-50s, mixed flour & water with bowl auto turns mode.
- b) Speed 2 operate for 30-50s mixed flour & water become starchy.
- c) Speed 3 operate for 1-2 minutes to form initial dough.
- d) Speed 4 operate for 2 minutes to form dough.
- e) Speed 5 operate for 2 minutes to form the best dough
(To add butter at step 4 for butter taste)




| Speed Usage Selection | | | |
|-----------------------|---------------------------|----------------------------------|-------------|
| Speed | Function | Ingredient | Accessories |
| 0 | Off | / | / |
| 1-3 | Mixture of dry ingredient | Flour, Butter, Potato | Hook |
| | Mixture of ingredient | Sauce, Salad Sauce, Potato Sauce | Beater |
| 4-5 | Mixing | Dough | Hook |
| | Mixing Starchy Ingredient | Cake Powder | Beater |
| 6-7 | Mixing Starchy Ingredient | Cream Butter | Beater |
| | Mixing Dough | Dough | Hook |
| 8-9 | Mixing Wet Ingredient | Egg/York | Beater |

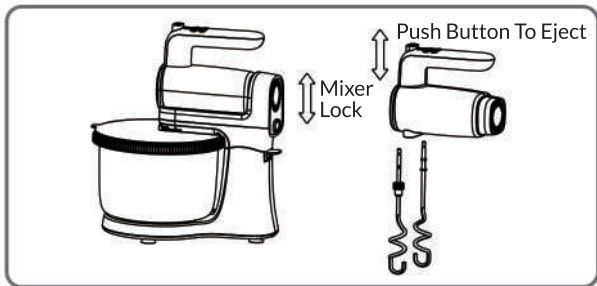 
8. When not in use, unplug power, removes mixer from stand, eject beater/hook.





 CAUTION
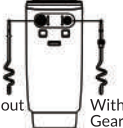
| Caution | |
|----------------|---|
| | <p>Do not use other than 220-240V~ power supply. It may cause electric shock & damages.</p> |
| | <p>Please use individual AC socket withstand min 6A specification. Sharing socket may cause fire.</p> |
| | <p>Hold the plug top inserting with horizontal direction to ensure proper inserted.</p> |
| | <p>Hold the plug top & pull out to remove it.</p> |
| | <p>Do not hold the AC Cord when pull out the plug top.</p> |

| | |
|--|--|
|  | <p>Do not use sharp edge tool to scratches the device.</p> |
|  <p>Unplug</p> | <p>Unplug the power after use to prevent unnecessary electric shock or fire.</p> |
|  <p>Without Gear With Gear</p> | <p>Do not mix up left/right hook/beater while inserting into mixer.</p> |
| <p>The max continuous operation time for the device is < 5 minutes. After this must rest for 15 minutes for next use.</p> | |
| <p>Do not mix up hook & beater to use together to avoid unnecessary damages.</p> | |
| <p>When install or removes hook or beater with mixer, unplug the power.</p> | |
| <p>Do not use other than BEAR accessories.</p> | |
| <p>During operation be sure all parts/accessories fixed firmly.</p> | |

| Warning | |
|---|------------------------------|
| <p>Do not repair the device by unauthorised technicians.</p> | |
|  | <p>Keep out of children.</p> |


| | |
|---|--|
|  | <p>Do not use wet hand touching the plug electric shock hazards.</p> |
|  | <p>Do not immerse into water, electric shock hazards.</p> |
| <p>During operation, beware of finger, cloth or hair touching the spinning portion.</p> | |
| <p>For household use only, do not let the device operates unattended.</p> | |
| <p>To replace damaged AC Cord, please call for authorised service center.</p> | |



Before cleaning, unplug the power.



 Use dry cloth to wipe the main body, avoid immerse into water.

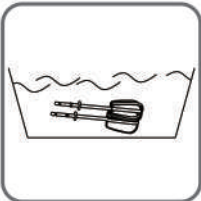

Hook & beater are both allow to immerse into water to clean.



Do not use metal brush.

TROUBLESHOOTING

| Problem | Cause | Action |
|--|----------------------------|--|
| During mixing flour invented into mixer body | Hook wrongly installed | Reverse the hook installation |
| | Ingredient overload | Unplug power, removes excess ingredients |
| Plug in socket but no function | No power supply | Check & verify |
| | Plug top fix firmly? | Check & verify |
| | AC socket in off position? | Check & verify |
| | Motor defect | Send for service |

Remark : After above troubleshooting, problem remained, please call authorised service center.

TROUBLESHOOTING

| | |
|-----------------|--------------------------------|
| Product Name | Smart Stand Mixer |
| Model | DDQ-B03V1 |
| Rated Voltage | 220V~ |
| Rated Frequency | 50Hz |
| Rated Capacity | 750g (flour 450g + water 300g) |
| Rated Power | 300W |
| Speed | 450RPM-1200RPM |
| Product Image | |

Operation Interface :

1. "-" button : reduce speed.
2. "+" button : increase speed.
3. Speed button : Direct to MAX speed, reset to previous speed.
4. ON/OFF button : to ON of OFF the device.
5. LED display : red color.

Operation Method :

1. Standby mode : red light blinking. (ON 0.5s, OFF 0.5s)
2. Speed display : LED display 0,1,2,3,4,5,6,7,8,9

Operation Process :

A. Power connected, LED display '0' is blinking (Standby Mode)

Remarks : No last memory function, once power reconnected, will back to stanby mode.

B. By pressing "+" or "-" button once, motor speed will "+" or "-" one step. When adjusted to desired speed (blinking), press ON/OFF button once. The device will start operation. (Once the speed adjusted to "0", device will stop operation & at standby mode.

C. During operation if ON/OFF button pressed, it stop immediately (the current running speed digit is blinking) once again press the ON/OFF button, it will resume the previous speed operation.

D. During operation at particular speed, once 'Speed' button is pressed, it will increased to max speed, 2nd press of 'Speed' button it will resume to particular speed.

**SMART-LINK TECHNOLOGY
VIETNAM COMPANY LIMITED
17th Floor, Flemington Tower,
182 Le Dai Hanh Street, Dist.11,HCM city
Hotline:028.6653.8882**

订单号：BE2120-2

注：以下内容均为审核专用，非印刷内容，请须知！

| | | | |
|------------|-------------|------------|-----------------------|
| 变更简要说明： | | 小熊电器股份有限公司 | |
| 设计 | 林延施 | 图号 | DDQ-B03V1(小熊越南)-45-03 |
| (校对) 业务 | 林静伟 | 物料名称 | 小熊越南说明书 |
| (校对) 项目工程师 | 郑艺新 | 物料编码 | 4084100001060 |
| 批准 | 彭玉峰 | 图纸版本 | A 版 |
| 日期 | 2020年12月05日 | | |