

Television

Reference Guide

参考指南 / Hướng dẫn Tham khảo / Guide de référence /


Справочник / คู่มืออ้างอิง / Panduan Referensi / دليل مرجعي /

راهنمای مرجع

XR-83A80L / 77A80L / 65A80L / 55A80L



https://rd1.sony.net/help/tv/kgal/h_ga/

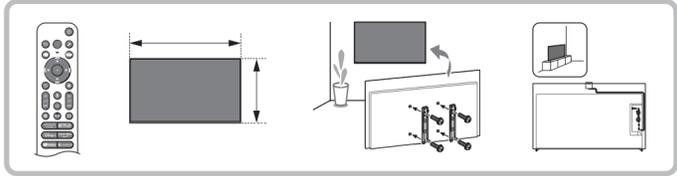

© 2023 Sony Corporation



4 App buttons**

- For other remote control models, refer to the online Help Guide for details.
- Only for limited region/country/model/language.
- Google Assistant or voice search requires an internet connection.
- Accessibility shortcuts is available by pressing and holding (Mute).
- TV box setup) setting is required.
- Installation of the NETFLIX app may be required depending on your region/country/TV models.



- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

- TV (电源)**
 - TV：显示电视频道列表或切换为输入。
 - 快速设置**：显示快速设置。
 - 输入选择**：显示并选择输入源等。
- MENU (控制菜单)**：显示控制菜单。

VN

Hình dạng đầu khiển từ xa, các bố trí, trình khả dụng và chức năng của các nút điều khiển từ xa có thể khác nhau tùy thuộc vào từng quốc gia/ quốc gia/mẫu TV/cài đặt TV**

- TV (Nguồn)**
 - TV: Hiện thị danh sách kênh của TV hoặc chuyển sang đầu (Nhà)
 - Cài đặt nhanh**: Hiện thị Cài đặt nhanh.
 - Chọn nguồn vào**: Hiện thị và chọn nguồn vào v.v.
- MENU (Điều khiển)**: Hiện thị Menu Điều khiển.

- TV (Nguồn)**
 - TV: Hiện trình đơn màn hình đầu (Nhà)
 - Quay lại**
 - Màn hình chính**
 - Trang bị (Micro/ Micrô)**: Sử dụng Tr ý Google hoặc TV giúp truy cập ứng dụng v.v.
 - Trang (Ám lượng)**
 - Trang tổng quan**: Hiện thị Trang tổng quan.
- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

 
 
 
 
 
 
 
 
 
 
 
 
 
- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.

- Trang (Ám lượng)**
- Trang tổng quan**: Hiện thị Trang tổng quan.











	Ⓐ	Ⓑ	Ⓒ	Ⓓ	
XR-83A80L	1850	1067	53	42	
	1850	1067	53	42	
	1850	1067	53	42	
XR-77A80L	1722	998	54	34,8	
	1722	998	54	34,8	
	1722	998	54	34,8	
XR-65A80L	1448	836	53	23,3	
	1448	836	53	23,3	
	1448	836	53	23,3	
XR-55A80L	1227	712	53	17,9	
	1227	712	53	17,9	
	1227	712	53	17,9	

*1 (kg/кг / 磅 / Xấp xỉ. / Environ / 近似. / 環境. / Perkiraan / تقريباً / تقريباً)



	Ⓐ	Ⓑ	Ⓒ	Ⓓ	
XR-83A80L	1850	1072	1099	1137	428
	1850	1072	1099	1137	428
	1850	1072	1099	1137	428
XR-77A80L	1722	1027	1027	1069	385
	1722	1027	1027	1069	385
	1722	1027	1027	1069	385
XR-65A80L	1448	862	862	904	327
	1448	862	862	904	327
	1448	862	862	904	327
XR-55A80L	1227	738	738	780	327
	1227	738	738	780	327
	1227	738	738	780	327

        *1 (kg/кг / 磅 / Xấp xỉ. / Environ / 近似. / 環境. / Perkiraan / تقريباً / تقريباً)



EN

- Note**
 - Instructions about "Installing the TV to the Wall" are included within the TV's instruction manual.
 - Read the supplied safety documentation for additional safety information.

Location of the identification label
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV. They can be found by removing the terminal cover.

- Installing the TV to the Wall**
- Using the optional Wall-Mount Bracket (SU-WL850 or SU-WL450)** (not supplied)**

To Customers:
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:
Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information
For instructions on Wall-Mount Bracket installation, see the installation information (Wall-Mount Bracket) on the product page for your TV model.
https://www.sony-asia.com/support
* Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing the TV, especially to determine the strength of the wall for withstanding the TV's weight.
* Sony is not liable for any damage or injury caused by mishandling or improper installation.
* Only qualified service personnel should carry out wall-mount installations.
* For safety reasons, it is strongly recommended that you use Sony accessories, including:
— Wall-Mount Bracket SU-WL850
— Wall-Mount Bracket SU-WL450

• Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket.
The diameter and length of the screws differ depending on the Wall-Mount Bracket model.
Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.
• Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

- Only for limited region/country/model.

Troubleshooting
General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.
1 Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
Or, press the power button on the TV for about 40 seconds until the TV turns off.
2 Refer to the Help menu shown for about 30 seconds.
3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV's software updated. Software updates provide new features and performance improvements.
4 Visit Sony support website (information provided at the end of this supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control of the TV.
It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.
• Replace the batteries.
The parental lock password has been forgotten.
• Enter 9999 for the PIN and enter the new PIN.
The screen becomes darker while watching TV.
• If the whole image or part of the image remains still, the screen brightness will be gradually reduced to prevent image retention. This is not a malfunction of the TV.

Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
Or, press the power button on the TV for about 40 seconds until the TV turns off.

2 Refer to the Help menu shown for about 30 seconds.

3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV's software updated. Software updates provide new features and performance improvements.

4 Visit Sony support website (information provided at the end of this supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control of the TV.
It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.
• Replace the batteries.
The parental lock password has been forgotten.
• Enter 9999 for the PIN and enter the new PIN.
The screen becomes darker while watching TV.
• If the whole image or part of the image remains still, the screen brightness will be gradually reduced to prevent image retention. This is not a malfunction of the TV.

Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
Or, press the power button on the TV for about 40 seconds until the TV turns off.

2 Refer to the Help menu shown for about 30 seconds.

3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV's software updated. Software updates provide new features and performance improvements.

4 Visit Sony support website (information provided at the end of this supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control of the TV.
It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.
• Replace the batteries.
The parental lock password has been forgotten.
• Enter 9999 for the PIN and enter the new PIN.
The screen becomes darker while watching TV.
• If the whole image or part of the image remains still, the screen brightness will be gradually reduced to prevent image retention. This is not a malfunction of the TV.

Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
Or, press the power button on the TV for about 40 seconds until the TV turns off.

2 Refer to the Help menu shown for about 30 seconds.

3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV's software updated. Software updates provide new features and performance improvements.

4 Visit Sony support website (information provided at the end of this supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control of the TV.
It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.
• Replace the batteries.
The parental lock password has been forgotten.
• Enter 9999 for the PIN and enter the new PIN.
The screen becomes darker while watching TV.
• If the whole image or part of the image remains still, the screen brightness will be gradually reduced to prevent image retention. This is not a malfunction of the TV.

Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
Or, press the power button on the TV for about 40 seconds until the TV turns off.

LA

Power is concerned about image retention.
If the same image is displayed repeatedly or for long periods of time, image retention may occur. To reduce image retention, we recommend that you turn off the TV normally by pressing the power button on the remote control or the TV.

Note

- Perform Panel refresh only when image retention is particularly noticeable. Avoid performing Panel refresh more than once a year because it may affect the usable life of the TV.
- Images that include logos and bright colors (including white) easily cause image retention. Avoid displaying these types of images for long periods of time, otherwise image retention may occur.

A white line appears on the screen.

XR-83A0L only)
If the Panel Refresh has been performed, a white line may be displayed on the screen during the Panel refresh. This is not a malfunction of the TV. Panel refresh starts after the TV is turned off and takes about one hour to complete.

The message [Panel refresh did not finish...] is displayed.

When i) the TV is turned on, ii) the AC power cord (mains lead) is unplugged, or iii) the room temperature falls outside of the range between 10 and 40 °C during the Panel refresh, the Panel refresh is not completed. Please avoid the above three conditions during the Panel refresh. (XR-83A0L only)

When ii) the TV is turned on or ii) the AC power cord (mains lead) is unplugged during the Panel refresh, the Panel refresh is not completed. Please avoid the above two conditions during the Panel refresh. (Except XR-83A0L)

For more information, refer to the Help Guide.
Press (Input select) on the remote control and select [Help]. If [Help] does not exist, select [Edit] and add [Help].

Specifications

System
Panel system
OLED (Organic Light Emitting Diode) Panel TV system
Depending on your country/area selection/TV model
Analogue: B/G, D, LK, M
Digital: DVB-T/DVB-T2
Colour system
PAL/SECAM/NTSC.58/NTSC.4.3
Channel coverage
Depending on your country/area selection/TV model
Analogue: UHF/VHF/Cable
Digital: UHF/VHF
Sound output (W)
XR-83A0L: 20 × 20 + 10 × 10
XR-77A0L: 20 × 10 + 10 × 10
XR-65A0L/ 55A0L: 10 × 10 + 10 × 10
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac
Bluetooth® Version 4.2

Input/Output/Ports
Antenna (aerial)/cable
75 ohm external terminal for VHF/UHF
HDMI IN 1/2/3/4 (HDCP 2.3-compatible)
Video:
4096 × 2160p (50, 60 Hz)**; 4096 × 2160p (24 Hz)**; 3840 × 2160p (50, 60 Hz)**; 3840 × 2160p (24, 30 Hz); 1080p (24, 30, 50, 60, 120 Hz); 1080i (50, 60 Hz); 720p (24, 30, 50, 60 Hz); 576p, 480p, PC Formats:
3840 × 2160p (100, 120 Hz)**
Audio:
eARC (Enhanced Audio Return Channel) mode
Refer to the online Help Guide for details.

Other
Optional accessories
Wall-Mount Bracket: SU-WL850 (except for LAN)
LAN
Camera and Microphone Unit: CMU-BC1
Operating temperature
0 °C - 40 °C

*1 When 4096 × 2160p is input and [Wide mode] is set to [Normal], the resolution is displayed as 3840 × 2160p. To display 4096 × 2160p, set [Wide mode] setting to [Full] or [Full 2].

*2 Refer to the online Help Guide for details.
*3 HDMI IN 3 and 4 only. Use the Ultra High Speed HDMI Cable to connect.
*4 Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.

*5 This information is for EU and other countries whose relevant regulation is based on EU energy labelling regulation.
*6 Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.
*7 Specified standby power is reached after the TV finishes necessary internal processes.
*8 Standby power consumption will increase when your TV is connected to the network.

Note
• Optional accessories availability depends on countries/region/TV model stock.
• Design and specifications are subject to change without notice.
• Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.

• Power consumption will increase when the built-in MIC is enabled as it is always listening.
• Visit Sony website for more information on product specifications.

Trademark Information
© Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.

• Gracote, the Gracote logo and logo type, are trademarks or trademarks of Gracote, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS IS A REGISTERED trademark of Tuxera Inc. in the US and other countries.

CS

注意
• 本电视机的使用说明书中包含关于“将电视机安装到墙壁上”的指示。
• 请阅读提供的安全指南，了解更多安全信息。

识别标签的安全

• 本产品符合欧盟的 CE 认证。
• 符合 CE 认证的产品的标签上印有电视机型号，可通过移除标签来篡改认证信息。

将电视机安装到墙壁上
使用可选的挂壁式支架 (SU-WL850 或 SU-WL450)** (未提供)

用户须知
• 为了保护您的电视机型号挂壁式支架所提供的使用指南，安装此电视机需要具备专业技能，特别是在鉴定墙壁安装电视位置的力量。
• 对于处理不当安装不当造成的损害，Sony 将不负责任。
• 只有合格的服务人员方可执行挂壁安装。
• 为了安全起见，强烈建议您使用 Sony 配件，包括：
— 挂壁式支架 SU-WL850

挂壁式支架安装位置
对于挂壁式支架安装位置，请参阅您的电视机型号的产品页面上的安全信息。（挂壁式支架）。
https://www.sony-asia.com/support

• 本产品符合欧盟的 CE 认证。
• 符合 CE 认证的产品的标签上印有电视机型号，可通过移除标签来篡改认证信息。

挂壁式支架安装位置
对于挂壁式支架安装位置，请参阅您的电视机型号的产品页面上的安全信息。（挂壁式支架）。
https://www.sony-asia.com/support

• 本产品符合欧盟的 CE 认证。
• 符合 CE 认证的产品的标签上印有电视机型号，可通过移除标签来篡改认证信息。

挂壁式支架安装位置
对于挂壁式支架安装位置，请参阅您的电视机型号的产品页面上的安全信息。（挂壁式支架）。
https://www.sony-asia.com/support

• 本产品符合欧盟的 CE 认证。
• 符合 CE 认证的产品的标签上印有电视机型号，可通过移除标签来篡改认证信息。

挂壁式支架安装位置
对于挂壁式支架安装位置，请参阅您的电视机型号的产品页面上的安全信息。（挂壁式支架）。
https://www.sony-asia.com/support

• 本产品符合欧盟的 CE 认证。
• 符合 CE 认证的产品的标签上印有电视机型号，可通过移除标签来篡改认证信息。

