




EN User manual TH คู่มือผู้ใช้
MS Manual pengguna VI Hướng dẫn sử dụng

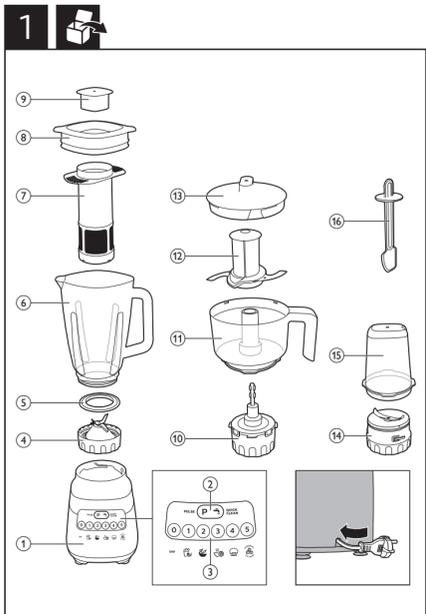

English

- 1 Motor unit with control knob
- 2 Pulse setting/cleaning setting
- 3 Speed settings
- 4 Blender blade unit
- 5 Sealing ring
- 6 Blender jar
- 7 Filter
- 8 Lid of blender jar
- 9 Small covering lid

Chopper

- 10 Coupling unit
- 11 Chopper bowl
- 12 Chopper blade unit
- 13 Chopper lid

Mill

- 14 Mill blade unit
- 15 Mill jar
- 16 Spatula

Bahasa Melayu

- 1 Unit motor dengan tombol kawalan
- 2 Tetapan denyut/tetapan pembersihan
- 3 Tetapan kelajuan
- 4 Unit bilah pengisar
- 5 Gegelang kedap
- 6 Balang pengisar
- 7 Penapis
- 8 Penutup balang pengisar
- 9 Tudung penutup kecil

Pencincang

- 10 Unit gandingan
- 11 Mangkuk pencincang
- 12 Unit bilah pencincang
- 13 Tudung pencincang

Pengisar kering

- 14 Unit bilah pengisar kering
- 15 Balang pengisar kering
- 16 Spatula

Máy xay thịt

- 10 Đầu nối
- 11 Chén xay thịt
- 12 Bộ dao xay của máy xay thịt
- 13 Nắp máy xay

Máy nghiền

- 14 Bộ dao xay máy nghiền
- 15 Chén nghiền
- 16 thìa

ไทย

- 1 หน่วยมอเตอร์แบบมีปุ่มควบคุมการทำงาน
- 2 การตั้งค่าปุ่มความเร็ว/การตั้งค่าการทำความสะอาด
- 3 การตั้งค่าความเร็ว
- 4 ส่วนที่ใส่ส่วนผสม ให้เหลวก่อนนำไปเครื่องสกัดน้ำผลไม้
- 5 ฝาผนึกที่ขอบ
- 6 โถปั่น
- 7 ตัวกรอง
- 8 ฝาปิดโถปั่น
- 9 ฝาปิดโถปั่นเล็ก

Tiếng Việt

- 1 Bộ phận động cơ có nút bấm điều chỉnh
- 2 Cài đặt nút / cài đặt vệ sinh máy
- 3 Cài đặt tốc độ
- 4 Bộ dao xay của máy xay
- 5 Giếng kín nước
- 6 Chén xay
- 7 Bộ lọc
- 8 Nắp chén xay
- 9 Nắp máy nhỏ

Motor unit with control knob

- 1 Motor unit with control knob
- 2 Pulse setting/cleaning setting
- 3 Speed settings
- 4 Blender blade unit
- 5 Sealing ring
- 6 Blender jar
- 7 Filter
- 8 Lid of blender jar
- 9 Small covering lid

Chopper

- 10 Coupling unit
- 11 Chopper bowl
- 12 Chopper blade unit
- 13 Chopper lid

Mill

- 14 Mill blade unit
- 15 Mill jar
- 16 Spatula

Bahasa Melayu

- 1 Unit motor dengan tombol kawalan
- 2 Tetapan denyut/tetapan pembersihan
- 3 Tetapan kelajuan
- 4 Unit bilah pengisar
- 5 Gegelang kedap
- 6 Balang pengisar
- 7 Penapis
- 8 Penutup balang pengisar
- 9 Tudung penutup kecil

Pencincang

- 10 Unit gandingan
- 11 Mangkuk pencincang
- 12 Unit bilah pencincang
- 13 Tudung pencincang

Pengisar kering

- 14 Unit bilah pengisar kering
- 15 Balang pengisar kering
- 16 Spatula

Máy xay thịt

- 10 Đầu nối
- 11 Chén xay thịt
- 12 Bộ dao xay của máy xay thịt
- 13 Nắp máy xay

Máy nghiền

- 14 Bộ dao xay máy nghiền
- 15 Chén nghiền
- 16 thìa

ไทย

- 1 หน่วยมอเตอร์แบบมีปุ่มควบคุมการทำงาน
- 2 การตั้งค่าปุ่มความเร็ว/การตั้งค่าการทำความสะอาด
- 3 การตั้งค่าความเร็ว
- 4 ส่วนที่ใส่ส่วนผสม ให้เหลวก่อนนำไปเครื่องสกัดน้ำผลไม้
- 5 ฝาผนึกที่ขอบ
- 6 โถปั่น
- 7 ตัวกรอง
- 8 ฝาปิดโถปั่น
- 9 ฝาปิดโถปั่นเล็ก

Tiếng Việt

- 1 Bộ phận động cơ có nút bấm điều chỉnh
- 2 Cài đặt nút / cài đặt vệ sinh máy
- 3 Cài đặt tốc độ
- 4 Bộ dao xay của máy xay
- 5 Giếng kín nước
- 6 Chén xay
- 7 Bộ lọc
- 8 Nắp chén xay
- 9 Nắp máy nhỏ

Motor unit with control knob

- 1 Motor unit with control knob
- 2 Pulse setting/cleaning setting
- 3 Speed settings
- 4 Blender blade unit
- 5 Sealing ring
- 6 Blender jar
- 7 Filter
- 8 Lid of blender jar
- 9 Small covering lid


Chopper

- 10 Coupling unit
- 11 Chopper bowl
- 12 Chopper blade unit
- 13 Chopper lid


Mill

- 14 Mill blade unit
- 15 Mill jar
- 16 Spatula


2

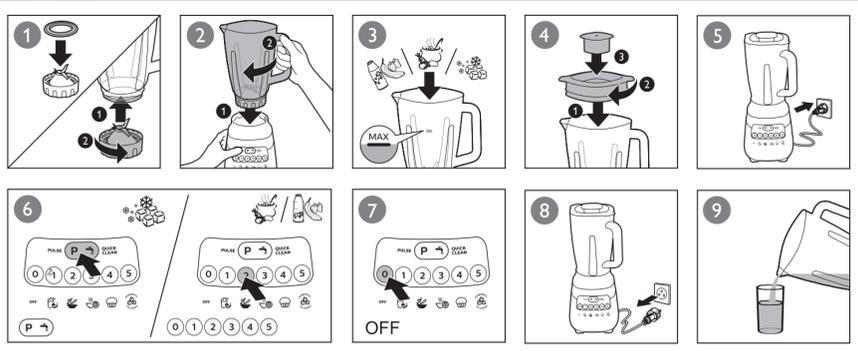

3

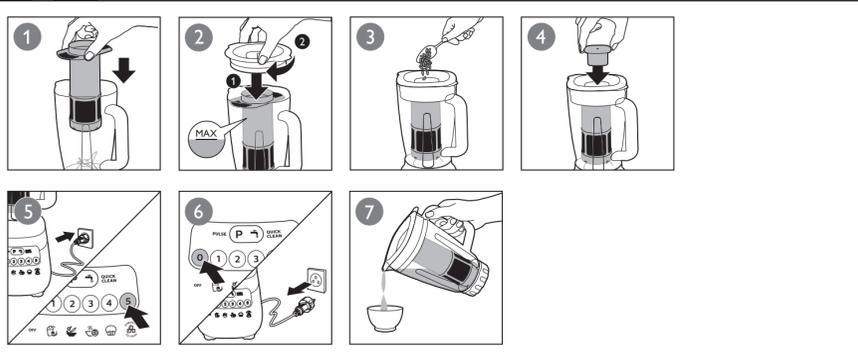

4

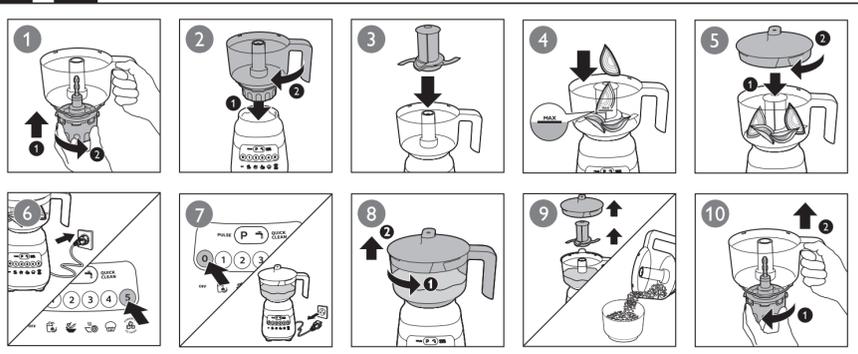


6


		kg (MAX)		(MAX)
		1500 ml	5	60 - 90 sec.
		1500 ml	5	60 - 90 sec.
		1500 ml	5	30 - 60 sec.
		6 x 300 g	P + 5	5 x P - 6 x P
		50 - 150 g	P	5 x P - 6 x P
		60 g	P	5 x P - 10 x P
		75 g	P	15 sec.
		100 g	P	25 sec.
		25 - 150 g	P	30 sec.
		25 - 50 g	P	30 sec.
		5 - 25 g	P	30 sec.
		25 - 75 g	P	30 sec.
		20-40 g	P	10 sec.
		150 g	P	10 sec.
		140 g + 400 ml	5	90 sec.
		100 g + 500 ml	5	90 sec.

2.5x2.5x2.5 cm

7

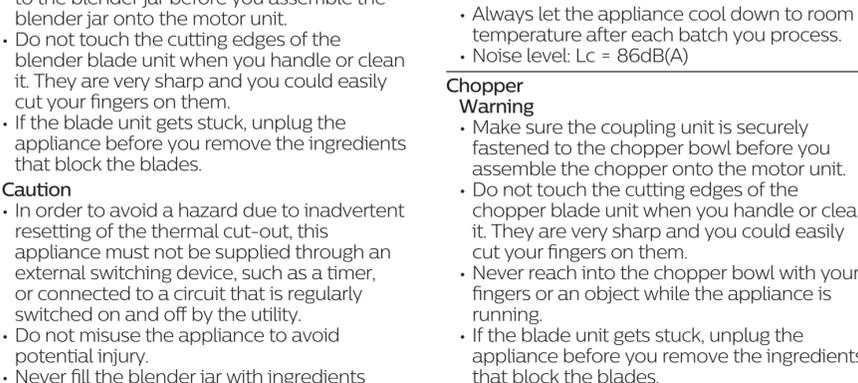

5

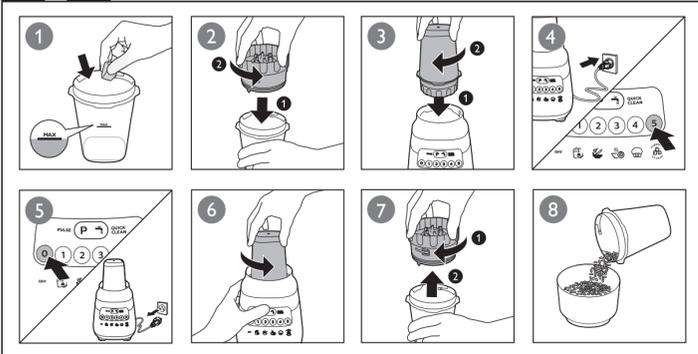

English

Important
Read this Important Information leaflet carefully before you use the blender and save it for future reference.

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- Never use the blender jar or mill beaker to switch the appliance on and off.
- Never let the appliance run unattended.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

• Children shall not play with the appliance.
• Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
• Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
• The appliance is intended to be used in household only.

Caution

- Switch off the appliance and always disconnect from supply if it is left unattended and before assembling, disassembling, approaching parts that move in use or cleaning.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum indication on the blender jar and the mill.
- Do not exceed the maximum quantities and processing times indicated in the relevant table.
- The appliance can only be switched on if the blender jar or the mill is assembled on the motor unit correctly.

Blender

Warning

- To prevent spillage, do not put more than 1.5 litres of liquid in the blender jar, especially when you process at a high speed. Do not put more than 1.25 litre in the blender jar when you process hot liquids or ingredients that tend to foam.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.
- Do not let appliance run for more than 2 minutes at time.
- Always let the appliance cool down to room temperature after each batch you process.
- Noise level: Lc = 86dB(A)

Chopper

Warning

- Make sure the coupling unit is securely fastened to the chopper bowl before you assemble the chopper onto the motor unit.
- Do not touch the cutting edges of the chopper blade unit when you handle or clean it. They are very sharp and you could easily cut your fingers on them.
- Never reach into the chopper bowl with your fingers or an object while the appliance is running.
- If the blade unit gets stuck, unplug the appliance before you remove the ingredients that block the blades.

Caution

- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not misuse the appliance to avoid potential injury.
- Never fill the blender jar with ingredients hotter than 60 °C.

Caution

- Always make sure the lid is properly assembled on the chopper bowl before you switch on the appliance.
- If food sticks to the wall of the chopper bowl, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Never use the chopper for more than 30 seconds without interruption.
- Always let the appliance cool down to room temperature after each batch you process.

Filter

Caution

- Never use the filter to process ingredients hotter than 60 °C.
- Never overload the filter. Do not put soaked soybeans or fruits exceeding the maximum level in the filter.
- Always make sure the lid is closed/assembled properly and the small covering lid is inserted properly in the lid before you switch on the appliance.
- Cut fruit into smaller pieces before you put it in the filter.
- Soak dried ingredients, such as soy beans, before you put them in the filter.

Mill

Warning

- Make sure the blade unit is securely fastened to the mill before you assemble the mill onto the motor unit.
- Never use the mill to grind very hard ingredients such as nutmeg, Chinese rock sugar and ice cubes.
- Do not touch the cutting edges of the mill blade unit when you clean it. They are very sharp and you could easily cut your fingers on them.

Caution

- Never use the mill for more than 30 seconds without interruption.
- Always let the appliance cool down to room temperature after each batch you process.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Built-in safety lock

This feature ensures that you can only switch on the appliance if the blender jar, the mill or the chopper bowl is assembled on the motor unit properly. If the blender jar, the mill or the chopper bowl is correctly assembled, the built-in safety lock will be unlocked.

Overheat protection

The appliance is equipped with overheat protection. If the appliance overheats, it switches off automatically (which might occur during heavy processing jobs or if the appliance is not used according to the instructions in the user manual). If this happens, first switch off and unplug the appliance and let it cool down to room temperature. Then check if the quantity of ingredients you are processing does not exceed the quantity mentioned in the user manual or if something is blocking the blade unit. Then put the mains plug back into the power outlet and switch on the appliance again.

Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Before first use

Thoroughly clean the parts that will come in contact with food before you use the appliance for the first time (see chapter "Cleaning").

Note

- Do not exceed the maximum quantities and processing times indicated in Fig 6
- Do not operate the appliance for more than 60 seconds at a time when processing heavy loads and let it cool down to room temperature for next operation.
- Do not attempt to process very thick recipes such as bread dough or mash potatoes.

Blender (Fig 2)

The blender is intended for:

- Blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks, shakes.
- Mixing soft ingredients, e.g. pancake batter or mayonnaise.
- Pureeing cooked ingredients.

Note

- Never overfill the blender jar above the maximum level indication (1.5 litres) to avoid spillage.

Tip

- To process ingredients very briefly, press the pulse setting button (PULSE) several times.
- Never use the pulse setting longer than a few seconds at a time.

Filter (Fig 3)

You can use the filter to obtain extra fine blended soymilk, fresh fruit juices, sauces or cocktails. Seeds/pulp/skin are retained in the filter.

Note

- Do not exceed the maximum level indicated on the filter.
- Do not use the filter to process hot ingredients.

Tip

- Soak the soybean for 4 hours or more to get optimum results.

Chopper (Fig 4)

You can use the chopper to chop ingredients such as onions, meat, herbs, vegetables, fruit, chocolate, firm cheese, baby food and nuts.

Note

- Do not use the chopper to mix liquids. Use the blender for this purpose.
- Do not exceed the maximum level indicated on the chopper.
- Never fill the chopper with hot ingredients.

Mill (Fig 5)

You can use the mini chopper to grind and chop ingredients such as coffee beans, peppercorns, sesame seeds, rice, wheat, coconut flesh, nuts (shelled), dried soy beans, dried peas, breadcrumbs, etc.

Note

- The mill is not suitable for chopping very hard ingredients like nutmeg and ice cubes.
- Do not use the mill to process liquids such as fruit juice.
- Do not process ingredients more than the mill jar's height.
- Never fill the mill with hot ingredients.

Cleaning (Fig 7)

Easily cleaning the blender jar. Follow the steps: 1 2 3 4.

Note: Make sure to press the cleaning button a few times.

Bahasa Melayu

Penting

Baca risalah maklumat Penting ini dengan teliti sebelum anda menggunakan pengisar dan simpan ia untuk rujukan masa depan.

Bahaya

- Jangan sekali-kali tenggelamkan unit motor ke dalam air atau cecair lain atau membilas unit di bawah paip. Hanya gunakan kain lembab untuk membersihkan unit motor.

Amaran

- Pastikan bahawa voltan yang dinyatakan pada perkakas sepadan dengan voltan sesalur tempatan anda.
- Jika kord sesalur kuasa rosak, ia mesti diganti oleh Philips, pusat servis yang dibenarkan oleh Philips ataupun pihak lain seumpamanya yang layak bagi mengelakkan bahaya.
- Jangan gunakan perkakas jika palam, kord sesalur atau bahagian lain telah rosak.
- Jangan sekali-kali gunakan balang pengisar atau bikar pengisar kering untuk menghidupkan dan mematikan perkakas.

