

AVA

HƯỚNG DẪN SỬ DỤNG

BÀN ỦI KHÔ

Model: 317




VUI LÒNG ĐỌC KỸ HƯỚNG DẪN SỬ DỤNG


THÔNG SỐ KỸ THUẬT

- Model: 317
- Trọng lượng: 0.7 kg
- Công suất: 1000 - 1200W
- Điện áp: 220/240V, 50/60Hz

MÔ TẢ SẢN PHẨM

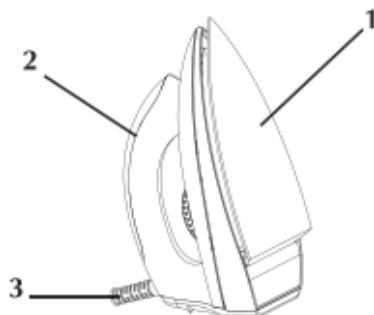

- 1. Mặt đế bàn ủi
- 2. Tay cầm
- 3. Dây điện

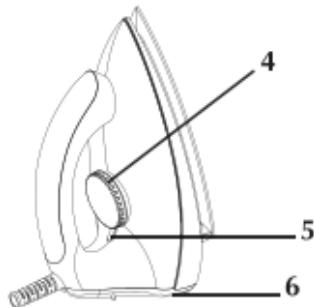

- 4. Nút điều chỉnh nhiệt độ
- 5. Đèn báo nhiệt độ
- 6. Chân để dựng bàn ủi

CHÚ Ý AN TOÀN KHI SỬ DỤNG

Để đảm bảo an toàn, quý khách vui lòng đọc kỹ hướng dẫn trước khi sử dụng.

- Chỉ sử dụng bàn ủi cho mục đích sử dụng của nó.
- Để tránh nguy cơ bị điện giật, không nhúng bàn ủi vào nước hoặc chất lỏng khác.
- Bàn ủi phải luôn được chuyển sang chế độ OFF/MIN trước khi cắm hoặc rút phích cắm khỏi ổ cắm. Không bao giờ giật dây để rút điện khỏi ổ cắm; Nên giữ chặt ổ cắm và rút phích cắm ra khỏi ổ cắm.
- Không để dây tiếp xúc với bề mặt đế khi bàn ủi còn nóng. Để bàn ủi nguội hoàn toàn trước khi vòng dây cất đi.
- Ngắt kết nối với nguồn điện khi không sử dụng.
- Không sử dụng bàn ủi khi dây điện bị rò rỉ hoặc bàn ủi bị vỡ, hư hỏng. Để tránh nguy cơ điện giật, không tự ý tháo rời sản phẩm, hãy mang đến cửa hàng để Nhân viên kỹ thuật kiểm tra và sửa chữa. Việc lắp ráp lại không chính xác có thể gây ra nguy cơ điện giật khi sử dụng.

- Chống chỉ định với trẻ em, người có vấn đề về tâm lý, thiếu kinh nghiệm hay hiểu biết trừ trường hợp dưới sự giám sát hoặc hướng dẫn của người có trách nhiệm.
- Hãy thận trọng, sê bông khi chạm vào mặt bàn ủi còn nóng.
- Nếu dây điện hoặc các bộ phận bị hư hỏng, cần phải được thay thế bởi nhà sản xuất, đại diện dù tiêu chuẩn để đảm bảo an toàn.
- Không được để bàn ủi mà không giám sát khi nó đang kết nối với nguồn điện, bàn ủi phải được sử dụng và đặt trên bề mặt phẳng. Khi đặt bàn ủi lên giá đỡ, đảm bảo rằng bề mặt đặt giá đỡ là ổn định.

HƯỚNG DẪN ĐẶC BIỆT

- Để tránh bị quá tải, không sử dụng cùng một thiết bị có công suất cao khác trên cùng một ổ cắm.

LƯU Ý NHỮNG HƯỚNG DẪN SAU:

- **KHÔNG** để trẻ em sử dụng mà không có sự giám sát.
- **KHÔNG** nhúng bàn ủi hoặc phích cắm điện vào bất kỳ chất lỏng nào.
- **KHÔNG** kết nối nguồn điện khi không sử dụng. Rút phích cắm ra khỏi nguồn điện khi thiết bị không được sử dụng.
- **KHÔNG** sử dụng thiết bị khi tay ướt.
- **KHÔNG** để thiết bị tiếp xúc trực tiếp với các điều kiện thời tiết (nước mưa, ánh nắng trực tiếp, etc.).

TRƯỚC KHI SỬ DỤNG


- Lau sạch mặt đế nhiệt bằng vải mềm.
- Xem, điều chỉnh nhiệt độ và chọn nhiệt độ thích hợp cho loại vải cần ủi.
- Cắm điện.

HƯỚNG DẪN SỬ DỤNG

- Đảm bảo rằng điện áp sử dụng đúng thông số của thiết bị.
- Cắm điện vào ổ cắm cố định an toàn trên tường.
- Phân loại quần áo theo từng loại chất liệu, và ủi.
- Khi đèn báo sáng, ngay sau đó vài phút nó sẽ tắt đi, lúc này bàn ủi đã đạt được nhiệt độ yêu cầu thì bắt đầu ủi. Khi điều chỉnh nhiệt độ cao hơn, đèn sẽ sáng trở lại, và sẽ tắt ngay sau đó để báo hiệu nhiệt độ đã đạt yêu cầu.
- Luôn phải rút dây điện ngay sau khi sử dụng.

BẢO QUẢN VÀ VỆ SINH BÀN ỦI

- Không bao giờ đặt bàn ủi trên bề mặt gỗ ghề.
- Không để lớp phủ chống tĩnh của tấm đế bị trầy xước. Hãy cẩn thận khi ủi gần khóa kéo, đồ trang trí bằng kim loại hoặc những thứ khác có thể làm xước hoặc mài mòn lớp phủ.
- Hãy đảm bảo rằng bàn ủi nguội và được rút phích cắm điện trước khi vệ sinh. Hãy giữ cho mặt bàn ủi và mặt ngoài của bàn ủi sạch sẽ và không có cặn vôi hoặc cặn khác.
- Không bao giờ sử dụng dụng cụ bằng kim loại hoặc những thứ khác có thể làm xước bề mặt đế, để làm sạch lớp vải bị chảy trên mặt bàn ủi.
- Khi ủi xong, hãy đảm bảo nút xoay điều khiển nhiệt được vặn ở vị trí OFF/MIN. Đặt bàn ủi đứng lên và để nó nguội.
- Cuốn dây uốn quanh mặt sau của bàn ủi và cất giữ cẩn thận.

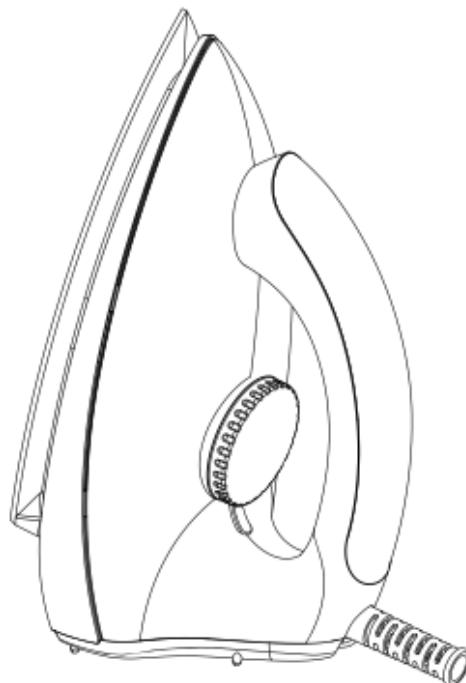

AVA

INSTRUCTION MANUAL

DRY IRON

Model: 317




Kindly read the instruction manual carefully


SPECIFICATION

- Model: 317
- Weight: 0.7 kg
- Power: 1000 - 1200W
- Voltage and frequency: 220/240V, 50/60Hz

DESCRIPTION

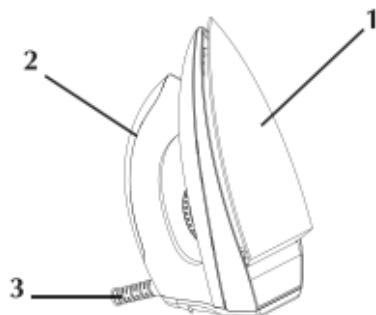

- 1. Soleplate
- 2. Iron handle
- 3. The cord

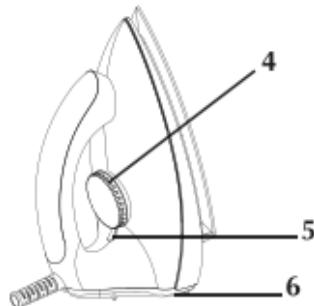

- 4. Temperature control
- 5. Signal lamp
- 6. Iron heel

GENERAL SAFETY INSTRUCTIONS

To be safe, kindly read carefully these instructions and the conjunction with the illustrations before using the appliance.

- Use the iron for its intended use.
- To protect against the risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned OFF & MIN before plugging or unplugging it from the outlet. Never pull the cord to unplug the power outlet; it is recommended to hold the socket firmly and take out the plug from the outlet.
- The core set should not be allowed to touch soleplate while it is hot.
- Please let the iron be cool completely before taking it off.
- Disconnect from power when it is not in use.

- Do not use the iron when the power cord is leaking or the iron is broken or damaged. To avoid the risk of electric shock, do not disassemble the product by yourself. Please take it to the store for a technician to check and repair. Incorrect reassembly may present a risk of electric shock when it is in use.
- Contraindicated with children, people who get psychological problems, insufficient experience or knowledge except the situation which is under the supervision of or guidance of a responsible person.
- Be careful, there will be burned if touching the hot soleplate.

SPECIAL INSTRUCTIONS

- To avoid overload, do not use the other high-powered device on the same outlet.

PLEASE PAY ATTENTION TO:

- **DO NOT** let children use it without supervision.
- **DO NOT** immerse the iron or the power plug in any liquid.
- **DO NOT** connect an unused power source. Unplug from the power source when the device is not in use.
- **DO NOT** use the device with wet hands.
- **DO NOT** expose the device to the weather conditions (rain, direct sunlight, etc.).

BEFORE USING THE IRON

- Wipe the soleplate with a soft cloth.
- Check and adjust the temperature control which is suitable for the fabric.
- Plug in the power.

INSTRUCTIONS FOR USE

- Make sure that the applied voltage is correct for the device's specifications.
- Plug in the power outlet which is fixed on the wall.
- Sort clothes by type of material and choose the proper temperature for ironing.
- When the heat reaches the requested temperature, the indicator light will turn on, and turn off shortly after a few minutes, then, start using it. When adjusting the temperature which is higher than the using temperature, the light will come back on, and then turn off shortly to indicate it gets the desired temperature.
- Please always unplug the power cord right after using.

TAKING CARE OF YOUR IRON AND STORING.

- Never place the iron on a rough surface.
- Do not let the nonstick coating of the sole plate be scratched. Please be careful when ironing nearly zippers, metal ornaments, or other things that could scratch or abrade the coating.
- Make sure that the iron is cool and unplugged before cleaning. Please keep the soleplate and the outside of the iron clean and free of lime starch or others residue. Please always stand the iron upright.
- Never use metal implements or other things which could scratch the surface to clean off the melted fabric on the soleplate.
- When finish ironing, please ensure the heat control dial is turned in the OFF/MIN position. Put the iron on its heel and let it cool down. Then wind the flex cord around the rear of the iron and store it carefully.

