

HÔM MY

MÁY SẤY TÓC

PH6870



HƯỚNG DẪN SỬ DỤNG

PH6870

Vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng sản phẩm.

THÔNG SỐ KỸ THUẬT

- Model: PH6870
- Công suất: 1800W
- Nguồn điện: 220V, 50-60Hz


Chú ý:

1. Luôn đảm bảo điện áp sử dụng tương ứng với điện áp ghi trên thiết bị.
2. Luôn tắt nguồn thiết bị trước khi đặt nó xuống, ngay cả khi nó chỉ dừng lại trong giây lát.
3. Không rút phích cắm bằng cách kéo dây nguồn. Luôn nắm chặt phích cắm và rút phích cắm ra khỏi ổ cắm.
4. Không sử dụng máy sấy gần khí đốt hoặc các vật liệu dễ cháy khác (như benzen, chất pha loãng sơn, thuốc xịt, v.v.).
5. Không sử dụng máy sấy khi tay ướt hoặc trong bồn tắm hoặc vòi hoa sen. Không để hoặc cất máy sấy gần bồn tắm, bồn rửa hoặc những nơi khác có thể tiếp xúc với nước và các chất lỏng khác hoặc độ ẩm cao.
6. Không làm sạch bằng các sản phẩm mài mòn hoặc ăn mòn.
7. Máy sấy được trang bị thiết bị an toàn nhạy cảm với nhiệt. Trong trường hợp quá nóng (ví dụ như nếu cửa hút gió phía sau bị chặn), máy sấy sẽ tự động dừng. Rút phích cắm của thiết bị và để ngoài trong vài phút. Trước khi bật lại thiết bị, hãy kiểm tra cửa hút gió để đảm bảo chúng không bị tóc, lông, các vật nhỏ, v.v... chặn lại.
8. Không hướng luồng không khí về phía mắt hoặc các vùng nhạy cảm khác.

9. Thiết bị này có thể được sử dụng bởi trẻ em từ 8 tuổi trở lên và những người bị suy giảm khả năng thể chất, giác quan hoặc tinh thần hoặc thiếu kinh nghiệm và kiến thức nếu họ đã được giám sát hoặc hướng dẫn về việc sử dụng thiết bị theo cách an toàn và hiểu rõ các mối nguy có liên quan. Trẻ em không được chơi với thiết bị. Trẻ em không được làm vệ sinh và bảo trì người dùng nếu không có sự giám sát.
10. Hãy làm sạch tóc trong cửa hút gió ngay lập tức để máy hoạt động bình thường.
11. **CẢNH BÁO:** Không sử dụng thiết bị này gần bồn tắm, vòi hoa sen, chậu rửa hoặc các vật chứa nước khác.
12. **CẢNH BÁO:** Không sử dụng thiết bị này gần nước.



CẤU TRÚC SẢN PHẨM

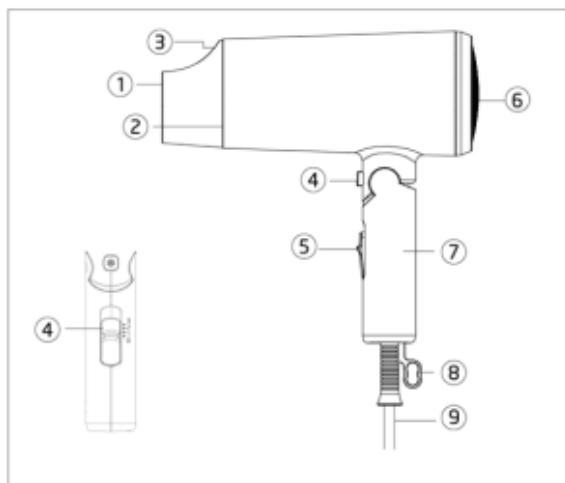

1. Đầu sấy
2. Cửa thoát khí
3. Cửa thoát ion
4. Nút chụp mát
5. Công tắc nguồn 0 (tắt) -1 (nhẹ) -2 (vừa) -3 (khô)
6. Cửa hút gió
7. Tay cầm có thể gấp lại
8. Móc treo
9. Dây cung cấp

Tính năng sản phẩm

Máy sấy tóc có thể hoạt động trực tiếp từ nguồn điện AC 220-240V ~ 50 / 60HZ. Nó có 3 cài đặt tốc độ và nhiệt độ với chức năng ion. Nhấn nút “1” để sấy tóc ngắn hoặc tạo kiểu tóc; Nhấn nút “2” để có gió và nhiệt độ nhẹ; Nhấn nút “3” để có gió và nhiệt độ tối đa để làm khô tóc nhanh chóng. Nhấn nút chụp mát để có chức năng làm mát.

Cách sử dụng

1. Đảm bảo công tắc nguồn ở vị trí “0”. Cắm thiết bị vào và bật công tắc nguồn.
2. Làm khô tóc của bạn sau khi gội đầu. Đặt công tắc nguồn thành “3” hoặc “2” mà không cần gắn vòi phun. Nếu bạn muốn sử dụng mát, vui lòng nhấn công tắc mát.
3. Cài tóc. Đặt công tắc nguồn thành “1” và gắn vòi phun. Nếu bạn muốn sử dụng mát, vui lòng nhấn công tắc mát.
4. Chuyển công tắc nguồn sang “0” và rút phích cắm của thiết bị

Vệ sinh

1. Luôn ngắt kết nối máy sấy trước khi vệ sinh.
2. Không nhúng thiết bị vào nước.
3. Làm sạch vỉ hút gió và đầu ra bằng bàn chải.
4. Lau sạch thiết bị bằng khăn hơi ẩm và lau khô bằng khăn khô.

Sản phẩm được thiết kế chỉ để sử dụng trong gia đình.


Tái chế

Thải bỏ đúng sản phẩm này. Dấu hiệu này chỉ ra rằng không nên vứt bỏ sản phẩm này cùng với các chất thải sinh hoạt khác. Để ngăn ngừa tác hại có thể xảy ra đối với môi trường hoặc sức khỏe con người từ việc xử lý chất thải không được kiểm soát, hãy tái chế chúng một cách có trách nhiệm để thúc đẩy việc tái sử dụng bền vững các nguồn nguyên liệu. Để trả lại thiết bị đã sử dụng của bạn, vui lòng sử dụng hệ thống thu hồi và trả lại hoặc liên hệ với nhà bán lẻ nơi sản phẩm được mua. Họ có thể lấy sản phẩm này để tái chế an toàn với môi trường.

Caution

1. Always ensure the voltage to be used corresponds to the voltage stated on the unit.
2. Always power switch the appliance off before putting it down, even if it is only for a moment.
3. Do not unplug by pulling on the power cord. Always grasp the plug and unplug it from the outlet.
4. Do not use the dryer near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.).
5. Do not use the dryer with wet hands or in the bath or shower. Do not leave or store the dryer near a tub, sink or other place where it will be exposed to water and other liquids or high humidity.
6. Do not clean with abrasive or corrosive products.
7. The dryer is equipped with a heat-sensitive safety device. In the event of overheating (for example if the air inlet is blocked), the dryer will stop automatically. Unplug the appliance and let it cool down for a few minutes. Before you power switch the appliance on again, check the air inlet to make sure they are not blocked by fluff, hair, etc.
8. Do not direct the airflow towards the eyes or other sensitive areas.
9. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
10. Please clean the hair in the air inlet instantly to keep a normal running.
11. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 12.**WARNING:** Do not use this appliance near water.

Product structure

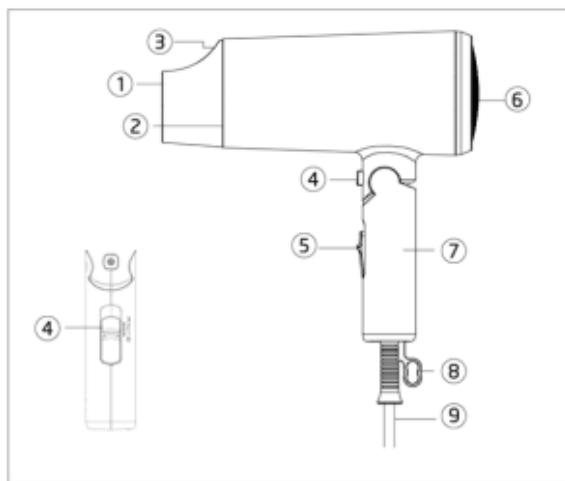

1. Concentrator
2. Air outlet
3. Ionic outlet
4. Cool shot button
5. Power switch 0(off)-1(soft)-2(set)-3(dry)
6. Air inlet
7. Foldable handle
8. Hanger
9. Supply cord

Product feature

The hair dryer can be operated directly from a A.C. 220-240V~50/60HZ power source. It has 3 settings of speed and temperature with ionic function. Press button "1" for drying short hair or styling your hair; Press button "2" for mild wind and temperature; Press button "3" for max wind and temperature to quickly dry the hair. Press the cool shot button for the cool function.

How to use

1. Make sure the power switch is in the “0” position. Plug the unit in and turn on the power switch.
2. Drying your hair after washing. Set the power switch to “3” or “2” without attaching the nozzle. If you want to use the cool, please press the cool switch .
3. Hair setting. Set the power switch to “1” and attach the nozzle. If you want to use the cool, please press the cool switch .
4. Turn the power switch to “0” and unplug the unit.

Cleaning

1. Always disconnect your dryer before cleaning.
2. Do not immerse the appliance in water.
3. Clean the air inlet grill and outlet by brush.
4. Clean the appliance with a slightly damp cloth and dry it up with a dry cloth.

RECYCLING

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
